

WINGMASTER

A Division of Valley Chrome Plating

The World's Finest Air Deflectors

Pick Up Trucks 2008

1028 Hoblitt Ave. Clovis, CA 93612

(800) 926-6569 (559) 298-9031 Fax

E-Mail: Info@Wingmaster.com

Website: www.Wingmaster.com

Effective February 1, 2008

What you need to know about Wingmaster air deflectors:

- NO DRILLING REQUIRED
- Increase fuel mileage by 1-3 MPG
- Adjustable brackets to optimize wing angle
- Decrease wind drag by at least 30%
- Brackets available for all domestic full size pickups
- Increase towing stability

***Better Fuel Mileage**

***No Drilling**

***Faster Towing**

***More Stability**

***Less Drag**



How to use this price sheet: The 3 "M's"

MAKE, MOUNT, MAX_(height)

- 1) MAKE:** Identify vehicle make and model. **Ford, GM, Dodge.** (color coded section).
- 2) MOUNT:** **Clip-On, Bolt-on or SUV / Luggage rack mount. Determine desired mounting options.**
(refer to clip-on, bolt-on or SUV section)



- 3) MAX:** Determine the maximum height of the trailer or the height of the "box" above the top of the truck.
NOTE 1: All wings should be mounted within six feet of the trailer (from rear edge of wing to front of trailer).
NOTE 2: Low profile is only available as a bolt on model while the Medium & High profile are available as a bolt-on or clip-on.
 This determines which wing is best for the application (See chart below).

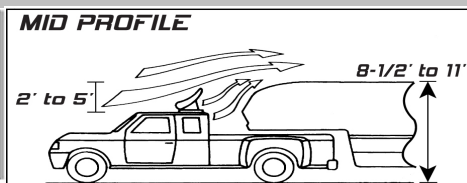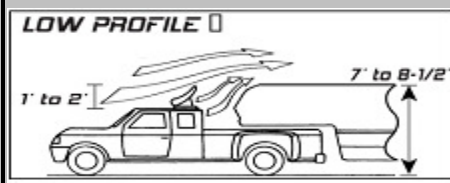

The 3 **M's** lead you to the part numbers for the WING AND the appropriate MOUNTING KIT.

MAKE, MOUNT, MAX (Height)

Table of Contents


	Pg #
FORD	3-5
P/U truck Clip-on mount Easy on / Easy off. No drilling required.	3
P/U truck Bolt-on mount Permanent mount. Drilling required.	4-5
SUV Clip-on mount Easy on / Easy off. No drilling required.	5
SUV Bolt-on mount Permanent mount. Drilling required.	4-5
GM	6-8
P/U truck Clip-on mount Easy on / Easy off. No drilling required.	6
P/U truck Bolt-on mount Permanent mount. Drilling required.	7
SUV Clip-on mount Easy on / Easy off. No drilling required.	8
SUV Bolt-on mount Permanent mount. Drilling required.	7
DODGE	9-10
P/U truck Clip-on mount Easy on / Easy off. No drilling required.	9
P/U truck Bolt-on Permanent mount. Drilling required.	10
CAL JAMMER Accent spoilers for all vehicles	11
Component and Replacement Parts	11-14
Warranty	Warranty

Ford...Ford...Ford...Ford...Ford...Ford...

CLIP-ON MOUNT WINGS

For Trailer Box Heights 11 ft. at Max. roofline.

Mounting kit required!!!

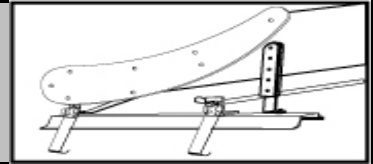


PN #	YEAR	DESCRIPTION	Wt.	W" x D" x H"
11600	ALL	Turbowing Universal Heavy Duty Polished Stainless Steel	45 lbs	57" x 25" x 21"
11502	ALL	Tow N Stow- Fold Down Wing Polished Stainless Steel	40 lbs.	57" x 25" x 21"
11800	ALL	Low Profile - Clip On for trailers with box height of 1-2 feet.	40 lbs	57"x18"x12"

HIGH PROFILE - Upgrade Kit

For trailer or "box" heights over 11 ft. at MAX roofline.

Kit Includes Mini-Wing, Large Endplates, Bolt Kit

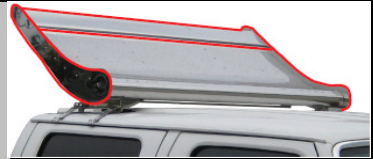

11603	ALL	11600 Upgrade Kit Polished Stainless Steel	10lbs	59" x12" 3"
11503	ALL	Tow-N-Stow High Profile Upgrade Kit Polished Stainless Steel	10lbs	59" x12" 3"

FORD Clip-On Mount Kits

All Kits Include: Front Legs (pair), Rear Legs (pair), Rear Leg Gaskets (2), Rear Leg Assembly(4pcs), "L" Brackets (2), Wrist Clips(2), Base Plates (2), Rear Leg Mounts(4pcs),Clips(4), Barrel Swivels(4), Base Plate Rubber(4), Clip Foam(2) Security Wrench (1), Bolt/Nut Kit(Misc bolts,nuts, washers).

Here's how it works: The Wingmaster clip-on system utilizes the exclusive clip-on mounting kits which clip on inside the weather stripping of the window, door-sill, or onto the rain gutter. The weather stripping will fit snugly over the clips of most full size domestic pickups. The clips are made of 18 gauge Stainless Steel for strength and are designed to prevent interference with doors or windows.




PN #	YEAR	DESCRIPTION	Wt.	W" x D" x H"
STANDARD CAB ADAPTER KITS				
11230	1980 - 1997	All Cabs With Rain Gutters	7 lbs	19"x4"x4"
10237	1998 & UP	No Rain Gutters F250 - F650	7 lbs	19"x4"x4"
EXTENDED / SUPER CAB ADAPTER KITS				
11230	1980 - 1997	All Cabs With Rain Gutters	7 lbs	19"x4"x4"
10237	1998 & UP	No Rain Gutters F250 - F650	7 lbs	19"x4"x4"
CREW CAB ADAPTER KITS				
11230	1980 - 1997	All Cabs With Rain Gutters	7 lbs	19"x4"x4"
10237	1998 & UP	No Rain Gutters F250 - F650	7 lbs	19"x4"x4"

FIBERGLASS SHELL CLIP KIT

All Kits Include: Front Legs (pair), Rear Legs (pair), Rear Leg Gaskets (2), Rear Leg Assembly(4pcs), "L" Brackets (2), Wrist Clips(2), Base Plates (2), Rear Leg Mounts(4pcs),Clips(4), Barrel Swivels(4), Base Plate Rubber(4), Clip Foam(2) Security Wrench (1), Bolt/Nut Kit(Misc bolts,nuts, washers) & 4 mounting plates.

10105		Kit fits all fiberglass camper type shells / toppers	7 lbs	19"x4"x4"
-------	--	--	-------	-----------

Ford...Ford...Ford...Ford...Ford...Ford...

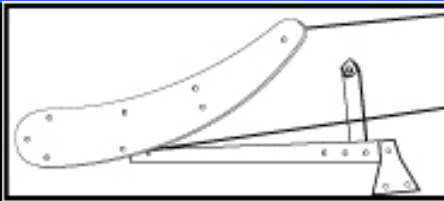


Bolt-On Wings

Mounting kit required!!!

The Wingmaster bolt-on mounting system bolts directly into the roof of the truck. This versatile application may be adjusted to "tune" the exact angle of the wing for each application. The brackets allow the wing body to be removed by simply removing four bolts. The required vehicle specific mounting brackets ensure the wing is always attached to the strongest, reinforced, section of the roof.

Low Profile Super Mini 400 Series

For narrow "low profile" trailers or "box" heights between 7 and 8-1/2 feet.
(1-2 ft. above roofline)




Bolt On Only

11400	All	Power Style Heavy Duty	35 lbs	48" x 18" x 12"
-------	-----	------------------------	--------	-----------------

Low Profile Super Mini 800 Series

For standard width "low profile" trailers or "box" heights between 7 and 8-1/2 feet.
(1-2 ft. above roofline)

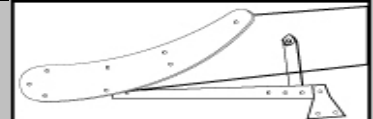


Universal

11800	All	Power Style Heavy Duty	40 lbs	57" x 18" x 12"
-------	-----	------------------------	--------	-----------------

Mid Profile


For trailer or "box" heights between 8ft. and 11ft. at MAX roofline.

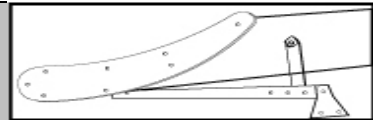

11600	All	Turbowing Universal Heavy Duty Polished Stainless Steel	45 lbs	57" x 25" x 21"
-------	-----	--	--------	-----------------

HIGH PROFILE - Upgrade Kit

For trailer or "box" heights over 11 ft. at MAX roofline.
Kit Includes Mini-Wing, Large Endplates, Bolt Kit

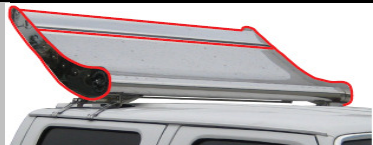

11603	ALL	11600 Upgrade Kit Polished Stainless Steel		59" x 10" x 3"
-------	-----	---	--	----------------

Required Bolt-On Mounting Kits

Bolt-On mounting bracket kits include all necessary parts to mount the wing to the specified vehicle.

Kits include: 2 rails, 2 triangle plates, front/rear combo legs(4), Front/rear leg gaskets(4), Rear Legs(2), Bolt Kits (misc. bolts,nuts,washers, rubber)

PN #	YEAR	DESCRIPTION	Wt.	W" x D" x H"
10601	All	Stainless Steel bolt-on mounting brackets 25 " Rail Length	10 lbs	40"x12"x3"
Excludes 80-97 Extra Cabs				
11702	Fiberglass	Stainless Steel bolt-on mounting brackets Under Roof Support Plates & Bolt Kit (Misc. Bolts,Nuts,Washers, Rubber)	4lbs	12"X6"X3"

Ford...Ford...Ford...Ford...Ford...Ford...

SUV LUGGAGE RACK AIR DEFLECTOR

Mounting kit required!!!

Low Profile Super Mini 800 Series


For standard width "low profile" trailers or "box" heights between 7 and 8-1/2 feet.
(1-2 ft. above roofline)



11800	All	Power Style Heavy Duty	40 lbs	57" x 18" x 12"
-------	-----	------------------------	--------	-----------------

Mid Profile

For trailer or "box" heights between 8ft. and 11ft. at MAX roofline.

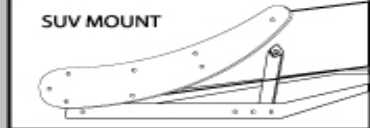

11600	All	Turbowing Universal Heavy Duty Polished Stainless Steel	45 lbs	57" x 25" x 21"
-------	-----	--	--------	-----------------

HIGH PROFILE - Upgrade Kit

For trailer or "box" heights over 11 ft. at MAX roofline.

Kit Includes Mini-Wing, Large Endplates, Bolt Kit



11603	ALL	11600 Upgrade Kit Polished Stainless Steel	10lbs	59" x 12" x 3"
-------	-----	---	-------	----------------

FORD LUGGAGE RACK MOUNTING KITS

SUV Mounting Kit Includes: Front / Rear Legs(4), Leg Gaskets(4), Rear Legs(2), Frame(1), Mounting Brackets(8), Bolt Kit(Misc.Bolts,Nuts,Washers, Rubber)4 Slider brackets

EXPEDITION

10239	1997 & UP	With Luggage Rack	14 lbs	59"x24"x7"
-------	-----------	-------------------	--------	------------


EXCURSION

11231	00 & UP	With Luggage Rack	14 lbs	59"x24"x7"
-------	---------	-------------------	--------	------------

Notes

CLIP-ON MOUNT WINGS

Mounting kit required!!!

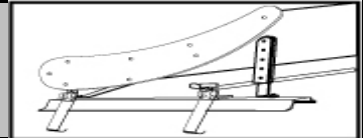

PN #	YEAR	DESCRIPTION	Wt.	W" x D" x H"
11600	ALL	Turbowing Universal Heavy Duty Polished Stainless Steel	45 lbs	57" x 25" x 21"
11502	ALL	Tow N Stow- Fold Down Wing Polished Stainless Steel	40 lbs.	57" x 25" x 21"
11800	ALL	Low Profile - Clip On for trailers with box height of 1-2 feet.	40 lbs	57"x18"x12"

HIGH PROFILE - Upgrade Kit

For trailer or "box" heights over 11 ft. at MAX roofline.

Kit Includes Mini-Wing, Large Endplates, Bolt Kit



11603	ALL	11600 Upgrade Kit Polished Stainless Steel	10 lbs	59" x 12" x3"
11503	ALL	Tow & Stow High Profile Upgrade Kit Polished Stainless Steel	10 lbs	59" x12" x3"

Clip-On Mount Kits

Here's how it works: The Wingmaster clip-on system utilizes the exclusive clip-on mounting kits which clip on inside the weather stripping of the window, door-sill, or onto the rain gutter. The weather stripping will fit snugly over the clips of most full size domestic pickups. The clips are made of 18 gauge Stainless Steel for strength and are designed to prevent interference with doors or windows.



All Kits Include: Front Legs (pair), Rear Legs (pair), Rear Leg Gaskets (2), Rear Leg Assembly(4pcs), "L" Brackets (2), Wrist Clips(2), Base Plates (2), Rear Leg Mounts(4pcs),Clips(4), Barrel Swivels(4), Base Plate Rubber(4), Clip Foam(2) Security Wrench (1), Bolt/Nut Kit(Misc bolts,nuts, washers).

PN #	YEAR	DESCRIPTION	Wt.	W" x D" x H"
------	------	-------------	-----	--------------

STANDARD CAB ADAPTER KITS

10243	Prior to Late 1991	All Cabs With Rain Gutters	7 lbs	19"x4"x4"
10242	Late 1991-Early 99	Without Rain Gutters	7 lbs	19"x4"x4"
10247	Late 1999-2000	Without Rain Gutters	7 lbs	19"x4"x4"
10244	2001 - 2006	Without Rain Gutters	7 lbs	19"x4"x4"

EXTENDED CAB ADAPTER KITS


10243	Prior to Late 1991	All Cabs With Rain Gutters	7 lbs	19"x4"x4"
10240	Late 1991-Early 94	Without Rain Gutters	7 lbs	19"x4"x4"
10241	Late 1994 - 00	Without Rain Gutters	7 lbs	19"x4"x4"
10246	New 1999-2000	With Third Door	7 lbs	19"x4"x4"
10247	2000-2001	Four Doors / 1500srs in '01 only	7 lbs	19"x4"x4"
10244	2001 - 2006	Without Rain Gutters	7 lbs	19"x4"x4"
17249	2007 & Up	Without Rain Gutters	7lbs.	19"x4"x4"

CREW CAB ADAPTER KITS

10243	Prior to Late 1991	All Cabs With Rain Gutters	7 lbs	19"x4"x4"
10242	Late 1991- 2000	Smooth Roof Without Ribs	7 lbs	19"x4"x4"
10248	Late 1991- 2000	With Ribs in Roof	7 lbs	19"x4"x4"
10249	2001- 2006	Without Rain Gutters	7 lbs	19"x4"x4"
17249	2007 & Up	Without Rain Gutters	7lbs.	19"x4"x4"

All Kits Include: Front Legs (pair), Rear Legs (pair), Rear Leg Gaskets (2), Rear Leg Assembly(4pcs), "L" Brackets (2), Wrist Clips(2), Base Plates (2), Rear Leg Mounts(4pcs),Clips(4), Barrel Swivels(4), Base Plate Rubber(4), Clip Foam(2) Security Wrench (1), Bolt/Nut Kit(Misc bolts,nuts, washers) & 4 mounting plates.

10105		Kit fits all fiberglass camper type shells / toppers	7 lbs	19"x4"x4"
-------	--	--	-------	-----------

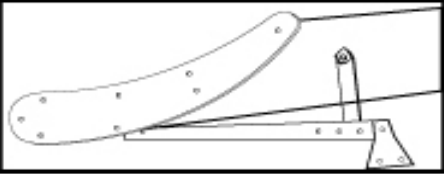


Bolt-On Wings

Mounting kit required!!!

The Wingmaster bolt-on mounting system bolts directly into the roof of the truck. This versatile application may be adjusted to "tune" the exact angle of the wing for each application. The brackets allow the wing body to be removed by simply removing four bolts. The required vehicle specific mounting brackets ensure the wing is always attached to the strongest, reinforced, section of the roof.

Low Profile Super Mini 400 Series

For narrow "low profile" trailers or "box" heights between 7 and 8-1/2 feet.
(1-2 ft. above roofline)

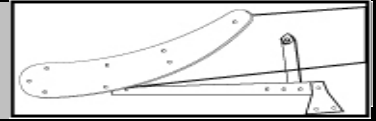


Bolt On Only

11400	All	Power Style Heavy Duty	35 lbs	48" x 18" x 12"
-------	-----	------------------------	--------	-----------------

Low Profile Super Mini 800 Series

For standard width "low profile" trailers or "box" heights between 7 and 8-1/2 feet
(1-2 ft. above roofline)




Universal

11800	All	Power Style Heavy Duty	40 lbs	57" x 18" x 12"
-------	-----	------------------------	--------	-----------------

Mid Profile

For trailer or "box" heights between 8ft. and 11ft. at MAX roofline.




11600	All	Turbowing Universal Heavy Duty Polished Stainless Steel	45 lbs	57" x 25" x 21"
-------	-----	--	--------	-----------------

HIGH PROFILE - Upgrade Kit

For trailer or "box" heights over 11 ft. at MAX roofline.

Kit Includes Mini-Wing, Large Endplates, Bolt Kit

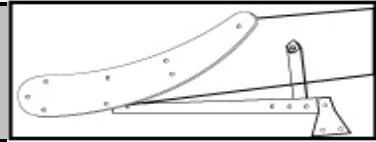

11603	ALL	11600 Upgrade Kit Polished Stainless Steel	10lbs	59" x 12" x 3"
-------	-----	---	-------	----------------

Required Bolt-On Mounting Kits

Bolt-On mounting bracket kits include all necessary parts to mount the wing to the specified vehicle.
Kits include: 2 rails, 2 triangle plates, front/rear combo legs(4), Front/rear leg gaskets(4), Rear Legs(2), Bolt Kits (misc. bolts,nuts,washers, rubber)

PN #	YEAR	DESCRIPTION	Wt.	W" x D" x H"
------	------	-------------	-----	--------------

STANDARD CAB BOLT-ON KITS

10601	ALL	Brackets with extended roof rails	10 lbs	40"x12"x3"
-------	-----	-----------------------------------	--------	------------

EXTENDED CAB BOLT-ON KITS

10601	PRE 2001	Stainless Steel Bolt-On mounting brackets	10 lbs.	40"x12"x3"
11703	2001 & UP	Stainless Steel Bolt-On mounting brackets with extended roof rails	10 lbs.	40"x12"x3"

CREW CAB BOLT-ON KITS

10601	PRE 1992	Stainless Steel Bolt-On mounting brackets	10 lbs.	40"x12"x3"
11704	2001 & UP	Stainless Steel Bolt-On mounting brackets with extended roof rails	10 lbs	40"x12"x3"

FIBERGLASS SURFACE


11702	Fiberglass	Stainless Steel Bolt-On mounting bolts w/ under roof support plates	4 lbs.	12"X6"X3"
-------	------------	---	--------	-----------

SUV LUGGAGE RACK AIR DEFLECTOR

Mounting kit required!!!

Low Profile Super Mini 800 Series


For standard width "low profile" trailers or "box" heights between 7 and 8-1/2 feet.
(1-2 ft. above roofline)

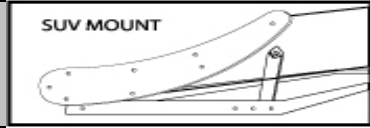

11800	All	Power Style Heavy Duty	40 lbs	57" x 18" x 12"
-------	-----	------------------------	--------	-----------------

Mid Profile

For trailer or "box" heights between 8ft. and 11ft. at MAX roofline.

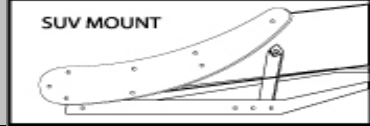


11600	All	Turbowing Universal Heavy Duty Polished Stainless Steel	45 lbs	57" x 25" x 21"
-------	-----	--	--------	-----------------

HIGH PROFILE - Upgrade Kit

For trailer or "box" heights over 11 ft. at MAX roofline.

Kit Includes Mini-Wing, Large Endplates, Bolt Kit

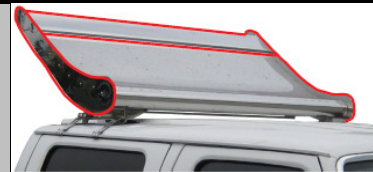

11603	ALL	11600 Upgrade Kit Polished Stainless Steel	10 lbs	59"X12"X3"
-------	-----	---	--------	------------

GM LUGGAGE RACK MOUNTING KITS

SUV Mounting Kit Includes: Front / Rear Legs(4), Leg Gaskets(4), Rear Legs(2), Frame(1), Mounting Brackets(8), Bolt Kit(Misc.Bolts,Nuts,Washers, Rubber)

TAHOE & YUKON

			Wt.	W" x D" x H"
10220	1995- 1999	With Luggage Rack	14 lbs.	59"x24"x7"
10222	00 & UP	With Luggage Rack	14 lbs.	59"x24"x7"

SUBURBAN


10220	1992 - 1999	With Luggage Rack	14 lbs.	59"x24"x7"
10222	00 & UP	With Luggage Rack	14 lbs.	59"x24"x7"

Notes

Dodge...Dodge...Dodge...Dodge...Dodge...

CLIP-ON MOUNT WINGS

Mounting kit required!!!

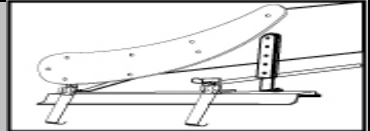

PN #	YEAR	DESCRIPTION	Wt.	W" x D" x H"
11600	ALL	Turbowing Universal Heavy Duty Polished Stainless Steel	45 lbs	57" x 25" x 21"
11502	ALL	Tow N Stow- Fold Down Wing Polished Stainless Steel	40 lbs.	57" x 25" x 21"
11800	ALL	Low Profile - Clip On for trailers with box height of 1-2 feet.	40 lbs	57"x18"x12"

HIGH PROFILE - Upgrade Kit

For trailer or "box" heights over 11 ft. at MAX roofline.

Kit Includes Mini-Wing, Large Endplates, Bolt Kit



11603	ALL	11600 Upgrade Kit Polished Stainless Steel	10 lbs	59" x 12" x 3"
11503	ALL	Tow N Stow High Profile Upgrade Kit Polished Stainless Steel	10 lbs	59" x 12" x 3"

Clip-On Mount Kits

Here's how it works: The Wingmaster clip-on system utilizes the exclusive clip-on mounting kits which clip on inside the weather stripping of the window, door-sill, or onto the rain gutter. The weather stripping will fit snugly over the clips of most full size domestic pickups. The clips are made of 18 gauge Stainless Steel for strength and are designed to prevent interference with doors or windows.



All Kits Include: Front Legs (pair), Rear Legs (pair), Rear Leg Gaskets (2), Rear Leg Assembly(4pcs), "L" Brackets (2), Wrist Clips(2), Base Plates (2), Rear Leg Mounts(4pcs),Clips(4), Barrel Swivels(4), Base Plate Rubber(4), Clip Foam(2) Security Wrench (1), Bolt/Nut Kit(Misc bolts,nuts, washers).


PN#	YEAR	DESCRIPTION	Wt.	W"xD"xH"
STANDARD CAB ADAPTER KITS				
10255	1974-1993	With Rain gutters	7lbs.	19"x4"x4"
10251	1994 - 2002	1500-3500 series thru 2002	7lbs.	19"x4"x4"
10251	2003	2500 & 3500 series in 2003	7lbs.	19"x4"x4"
10252	2003	1500 SERIES ONLY	7lbs.	19"x4"x4"
10252	2004 & UP	1500, 2500 & 3500 series	7lbs.	19"x4"x4"
CLUB CAB ADAPTER KITS				
10255	1974-1993	With Rain gutters	7lbs.	19"x4"x4"
10250	1994 - 1997	Without Rain gutters	7lbs.	19"x4"x4"
QUAD CAB ADAPTER KITS				
10251	1994 - 2002	1500-3500 series thru '02	7lbs.	19"x4"x4"
10251	2003	2500 & 3500 series in '03	7lbs.	19"x4"x4"
10252	2003	1500 series Only	7lbs.	19"x4"x4"
10252	2004 & UP	1500, 2500 & 3500 series	7lbs.	19"x4"x4"

FIBERGLASS SHELL CLIP KIT

All Kits Include: Front Legs (pair), Rear Legs (pair), Rear Leg Gaskets (2), Rear Leg Assembly(4pcs), "L" Brackets (2), Wrist Clips(2), Base Plates (2), Rear Leg Mounts(4pcs),Clips(4), Barrel Swivels(4), Base Plate Rubber(4), Clip Foam(2) Security Wrench (1), Bolt/Nut Kit(Misc bolts,nuts, washers) & 4 mounting plates.

10105		Kit fits all fiberglass camper type shells / toppers	7 lbs	
-------	--	--	-------	--

Dodge...Dodge...Dodge...Dodge...Dodge...

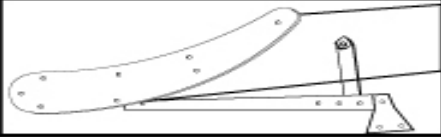


Bolt-On Wings

Mounting kit required!!!

The Wingmaster bolt-on mounting system bolts directly into the roof of the truck. This versatile application may be adjusted to "tune" the exact angle of the wing for each application. The brackets allow the wing body to be removed by simply removing four bolts. The required vehicle specific mounting brackets ensure the wing is always attached to the strongest, reinforced, section of the roof.

Low Profile Super Mini 400 Series

For narrow "low profile" trailers or "box" heights between 7 and 8-1/2 feet.
(1-2 ft. above roofline)




Bolt On Only

11400	All	Power Style Heavy Duty	35 lbs	48" x 18" x 12"
-------	-----	------------------------	--------	-----------------

Low Profile Super Mini 800 Series

For standard width "low profile" trailers or "box" heights between 7 and 8-1/2 feet.
(1-2 ft. above roofline)




Universal

11800	All	Power Style Heavy Duty	40 lbs	57" x 18" x 12"
-------	-----	------------------------	--------	-----------------

Mid Profile

For trailer or "box" heights between 8ft. and 11ft. at MAX roofline.




11600	All	Turbowing Universal Heavy Duty Polished Stainless Steel	45 lbs	57" x 25" x 21"
-------	-----	--	--------	-----------------

HIGH PROFILE - Upgrade Kit

For trailer or "box" heights over 11 ft. at MAX roofline.

Kit Includes Mini-Wing, Large Endplates, Bolt Kit

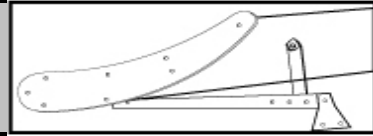

11603	ALL	11600 Upgrade Kit Polished Stainless Steel	10lbs	59" x 12" x 3"
-------	-----	---	-------	----------------

Required Bolt-On Mounting Kits

Bolt-On mounting bracket kits include all necessary parts to mount the wing to the specified vehicle.

Kits include: 2 rails, 2 triangle plates, front/rear combo legs(4), Front/rear leg gaskets(4), Rear Legs(2), Bolt Kits (misc. bolts,nuts,washers, rubber)

PN#	YEAR	DESCRIPTION	Wt.	W" x D" x H"
-----	------	-------------	-----	--------------

STANDARD CAB BOLT-ON KITS

10601	All	Stainless Steel Bolt-On mounting brackets	10lbs	40"X12"X3"
-------	-----	---	-------	------------

QUAD CAB BOLT- ON KITS

10601	PRE 2002	Stainless Steel Bolt-On mounting brackets	10lbs	40"X12"X3"
-------	----------	---	-------	------------

11706	2003 - 1500 series truck	Stainless Steel Bolt-On mounting brackets with extended roof rails	10lbs	40"X12"X3"
-------	--------------------------	--	-------	------------

11706	2004 & up All trucks	Stainless Steel Bolt-On mounting brackets with extended roof rails	10lbs	40"X12"X3"
-------	----------------------	--	-------	------------

Fiberglass Surface Bolt on Mounting Brackets

11702	FIBERGLASS MOUNT KIT - Bolts under roof support plates.		4 Lbs.	12"X6"X3"
-------	---	--	--------	-----------

Cal-Jammer Bolt-On Wings Universal

Ultra Low Profile to enhance looks and aid aerodynamics for trailers less than 1 foot above the vehicle roofline.

PN #	STYLE	DESCRIPTION	Wt.	W" x D" x H"
11101	Power Style	Stainless Steel "Cruiser"	12 lbs	42" X9" X 6"
11105	Power Style	Stainless Steel "Cruiser"	13 lbs	48" X9" X 6"
11121	Power Style	Stainless Steel "Cruiser"	14 lbs	52" X9" X 6"
22159	Shear Style	Stainless Steel "Cruiser"	17 lbs	59" X9" X 6"
22167	Shear Style	Stainless Steel "Cruiser"	19 lbs	67" X9" X 6"

Aero Flow Econo Wind Deflector

11301	ALL	AeroFlow S.S. Wind Deflector	35 lbs.	51"x12"x11"
Universal Wind Deflector - Mounting Kit Sold Separately				

11302	04&UP Dodge	AeroFlow S.S. I Wind Deflector	35 lbs	46"x12"x11"
This Air Deflector Includes all necessary mounting hardware (04 & Newer Dodge)				

Clip-On Mount Kits

Aero Flow Clip Kits Include: Clips (4), Barrel Hinges (4), Security Bolts (4), Security Wrench, Clip Foam

PN #	YEAR	DESCRIPTION	Wt.	W" x D" x H"
STANDARD CAB ADAPTER KITS				
31230	1980 - 1997	All Cabs With Rain Gutters	3lbs	19"x4"x4"
30237	1998 & UP	No Rain Gutters F250 - F650	3lbs	19"x4"x4"
EXTENDED / SUPER CAB ADAPTER KITS				
31230	1980 - 1997	All Cabs With Rain Gutters	3lbs	19"x4"x4"
30237	1998 & UP	No Rain Gutters F250 - F650	3lbs	19"x4"x4"
CREW CAB ADAPTER KITS				
31230	1980 - 1997	All Cabs With Rain Gutters	3lbs	12"x6"x3"
30237	1998 & UP	No Rain Gutters F250 - F650	3lbs	12"x6"x3"
			Wt.	W"xD"xH"
30255	1974-1993	With Rain gutters	3lbs	12"x6"x3"
30251	1994 - 2002	1500-3500 series thru 2002	3lbs	12"x6"x3"
30251	2003	2500 & 3500 series in 2003	3lbs	12"x6"x3"
30252	2003	1500 SERIES ONLY	3lbs	12"x6"x3"
30252	2004 & UP	1500, 2500 & 3500 series	3lbs	12"x6"x3"
CLUB CAB ADAPTER KITS				
30255	1974-1993	With Rain gutters	3lbs	12"x6"x3"
30250	1994 - 1997	Without Rain gutters	3lbs	12"x6"x3"
QUAD CAB ADAPTER KITS				
30251	1994 - 2002	1500-3500 series thru '02	3lbs	12"x6"x3"
30251	2003	2500 & 3500 series in '03	3lbs	12"x6"x3"
30252	2003	1500 series Only	3lbs	12"x6"x3"

CLIP ON MOUNT KITS CONTINUED..

STANDARD CAB ADAPTER KITS

PN #	YEAR	DESCRIPTION	Wt.	W" x D" x H"
30243	Prior to Late 1991	All Cabs With Rain Gutters	3lbs	12"X6"X3"
30242	Late 1991-Early 99	Without Rain Gutters	3lbs	12"X6"X3"
30247	Late 1999-2000	Without Rain Gutters	3lbs	12"X6"X3"
30244	2001 - 2006	Without Rain Gutters	3lbs	12"X6"X3"

EXTENDED CAB ADAPTER KITS

30243	Prior to Late 1991	All Cabs With Rain Gutters	3lbs	12"X6"X3"
30240	Late 1991-Early 94	Without Rain Gutters	3lbs	12"X6"X3"
30241	Late 1994 - 00	Without Rain Gutters	3lbs	12"X6"X3"
30246	New 1999-2000	With Third Door	3lbs	12"X6"X3"
30247	2000-2001	Four Doors / 1500srs in '01 only	3lbs	12"X6"X3"
30244	2001 - 2006	Without Rain Gutters	3lbs	12"X6"X3"
37249	2007 & Up	Without Rain Gutters	3lbs	12"X6"X3"

CREW CAB ADAPTER KITS

30243	Prior to Late 1991	All Cabs With Rain Gutters	3lbs	12"X6"X3"
30242	Late 1991- 2000	Smooth Roof Without Ribs	3lbs	12"X6"X3"
30248	Late 1991- 2000	With Ribs in Roof	3lbs	12"X6"X3"
30249	2001- 2006	Without Rain Gutters	3lbs	12"X6"X3"
37249	2007 & Up	Without Rain Gutters	3lbs	12"X6"X3"

RETROFIT AND UPGRADE KITS

UPDATE TO PLATE MOUNT SYSTEM AND / OR THE HIGH PROFILE DESIGN

31330 Retrofit Conversion Kit 5 lbs
 This kit converts SUV / Luggage rack mounted wings over to the Plate Mount System for pickup trucks. This kit also converts original early model Aerotravel suction cup mount designs to the clip-on Plate Mount System. The Retrofit kit eliminates use of the suction cups, rectangle shaped frame, and the nylon strap/clip combination. The Retrofit kit includes new front and rear legs, which offer added adjustment, and replaces the original equipment the more secure Plate Mount System. **Will not mount on Dodge new body styles (2003 -).**
Note: A PLATE MOUNT ADAPTER KIT MUST ALSO BE ORDERED WITH THE RETROFIT KIT.

611-14 **Adapter Kit** Hardware Conversion From Aluminum Railed Units to Stainless Mounting System 11611-11614

Kit Includes: Front Feet, Ruber Gaskets, Rear Feet, Rails, Tri-Plates

COMPONENT AND REPLACEMENT PARTS (CONT...)

PN #	DESCRIPTION	Wt.	W" x D" x H"
31108	Extended Rear Ajustment Leg (2) PL/SS, 600 Series Application: Application only when more rear wing lift is desired, i.e. Top-Kick, Kodiak, "Cube-Type" cargo van w/ high box. Also required when using #31112 as a front "T" bracket.	2 lbs	10" x 3/4" x 3/4"
31112	Extended Front "T" Wing Bkt. (2) PL/AL, 600, 400 & 800 Series PL/AL, 600, 400 & 800 Series Application: Replaces #31110 to provide 4" of height to front of wing. Requires using #31108, extended rear adjustment leg. *NOTE: Provides 4" total height to front of wing. Commonly used to allow wing to clear external horns, cab lights, sunroof, etc. Requires us of #31108, extended rear adjustment leg to balance wing ant to provide proper rear height.	2 lbs	6"x1 1/2"x1/8"x4"

COMPONENT AND REPLACEMENT PARTS

Clip-On Wing Component Kit

PN #	Parts Not Sold Individually.	Wt.
For 11501 Aerotrvel I, III Clip On Wings		
311 CLP	Kit Includes: (Polished Stainless Steel Finish) Front Wing Support Bracket Leg (2), Rear Wing Support Strut (L/H) Rear Wing Support Strut (R/H), Strut Plates (2), Clip Bracket Assembly Tension Rod(Alum), Complete Hardware Kit (nut, bolt and washer hardware for mounting base plates-up assembly).	6 LBS
313 WR	Kit Includes: Clip Security Screws (4) (All Aerotravel PMS adapter kits) Security Screw Hex Wrench (1)	2 lbs

Notes: